

310-3043

Connections

Faxback Doc. # 49948

Connecting Your Receiver to Your VCR

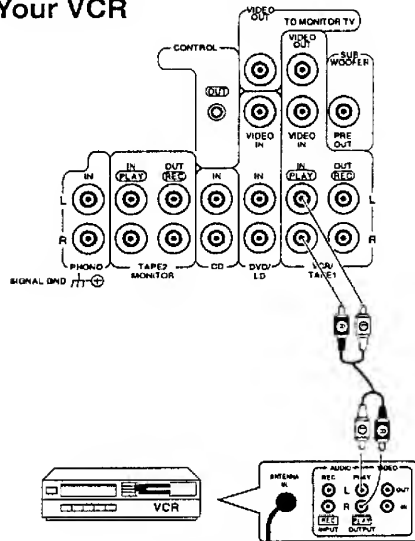


Fig. # 1

Connecting the Center Speaker

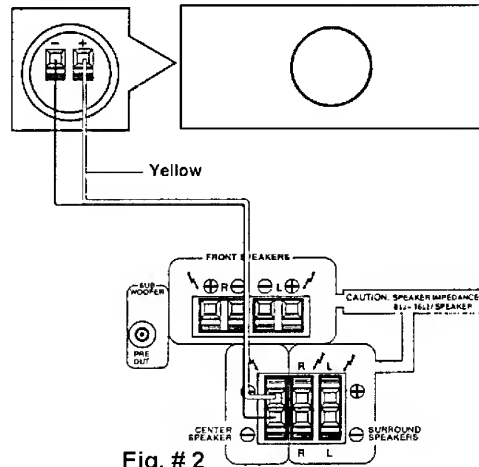


Fig. # 2

Connecting the Subwoofer and Front Speakers

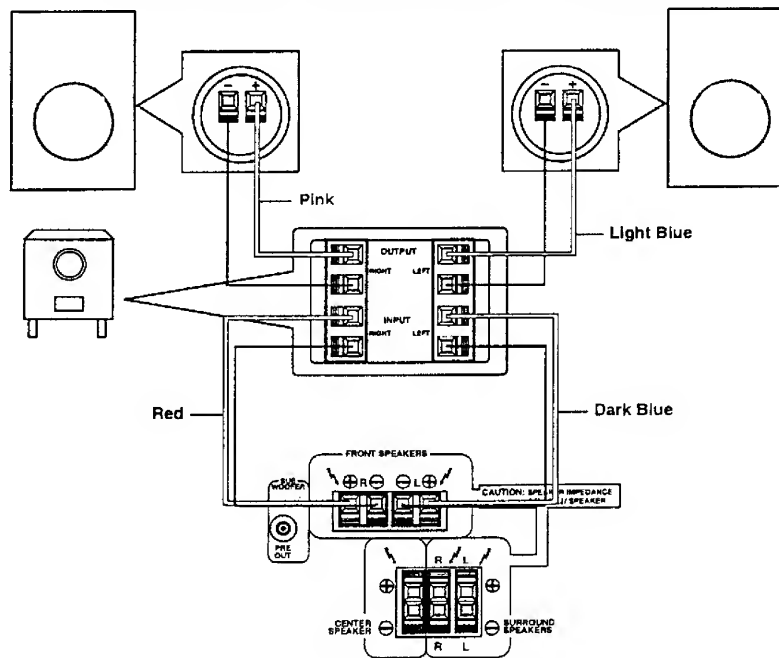


Fig. # 3

Connections II

310-3043

Faxback Doc. # 49948002

Connecting the Surround-Sound (Rear) Speakers

